TEAC

9A09526900

RC-L800

Remote Control Unit

OWNER'S MANUAL

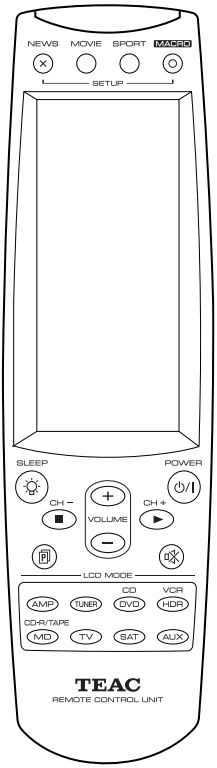

Table of Contents

Features 2
Precautions 3
Battery Installation 3
Name of Each Control 4
Setup Mode
    How to enter the setup mode 7
Setting Key Codes
    Pre-programmed Code Setting 8
    Learning a Device 11
Deleting Key Code
    Deleting an Individual Key Code 13
    Deleting Whole Key Codes of a Device . 14
Changing Key Layout
    Changing Key Layout 15
Macro Function
    Setting up Macros 16
    Viewing Macros 18
    Deleting Macro-Assigned Key 19
Channel Assignment
    Setting the Assignment 20
    Viewing an Assigned Channel 21
    Deleting a Channel Assignment 22
    Re-labeling Assignment Key Labels 23
Timer/Macro Mode
    Setting Timer/Macro Mode 24
Setting Device
    Creating a New Device 25
    Re-labeling a Device 26
    Deleting a Device 27
Other Settings
    Setting Date and Time 28
    Display Date and Time 28
    Auto Power OFF 29
    Back-light 30
    Beep on/off 31
    Viewing Version Numbers 32
Data Transmission
    Loading Data from a PC 32
    Loading Data from Another RC-L800 33
Re-setting Unit 34
Debugging Code 34
Troubleshooting 35
Specifications 35

Features

TEAC RC-L800 Features

- This remote control fully supports use with the AG-L800 and DV-L800 devices.
- Touch-screen, universal remote control perfect for home theater systems.
- Learn and emulate up to 16 remote controls, 48 buttons per device.
- One-touch buttons for frequently used functions
- Assign Macros of up to 60 commands long, including time delays.
- Macros, all commands are displayed on the screen in sequence.
- Rename devices and change touch screen icon layout.
- Three channel classifications make grouping of your favorite channels easy.
- LCD backlight button lights up the entire touch screen and buttons.
- Clock and calendar built in.
- Auto power off.
- Loading data from a PC (CD-ROM and USB cable supplied).

Precautions

Precautions

- Avoid storage or use in high temperatures, exposed to direct sunshine or near the room heaters.
- Do not attempt to disassemble or modify the product. This could damage the product or cause injury.
- Do not splash water or liquid on the product. This can cause the product to malfunction.
- Do not drop or subject to rough handling. This can damage the product.
- For the cleaning, do not use benzene, thinner or alcohol. These can deform or discolor the product. Use soft, dry cloth when cleaning.
- Do not touch the touch screen with sharp object. This can damage the screen.
- Even if the remote control unit is operated within the effective range, remote control operation may be erratic if there are any obstacles between the receiving unit and the remote control.
- If the remote control unit is operated near other appliances which generate infrared rays, or if other remote control devices using infrared rays are used near the unit, it may operate incorrectly. Conversely, the other appliances may operate incorrectly.

Battery Installation

1. Remove the battery compartment cover.
2. Insert four AAA (R03, UM-4) batteries. Make sure that the batteries are inserted with their positive ⊕ and negative ⊖ poles positioned correctly.
3. Close the cover.

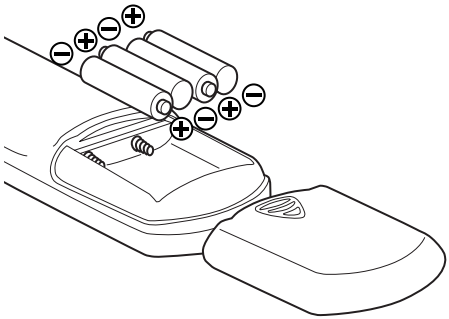

Battery Replacement

If the distance required between the remote control unit and main unit decreases, the batteries are getting weak. In this case replace the batteries with new ones. The battery power is indicated with a battery icon in the screen.

Precautions concerning batteries

- Be sure to insert the batteries with correct positive ⊕ and negative ⊖ polarities.
- Use batteries of the same type. Never use different types of batteries together.
- When the remote control unit is not to be used for a long time (more than a month), remove the batteries from the remote control unit to prevent them from leaking. If they leak, wipe away the liquid inside the battery compartment and replace the batteries with new ones.
- Do not heat or disassemble batteries and never dispose of old batteries by throwing them in a fire.

Name of each Control 1

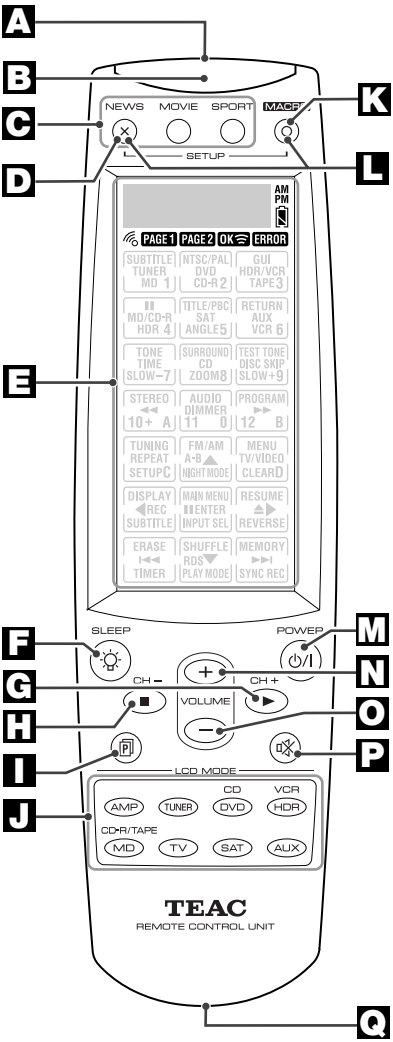

A Remote Control Transmitting Area
Transmits the remote control signal to components.

B Light Sensor
Measures ambient light levels to turn on/off back-light illumination.

C Quick Channel Button
Calls up listing of channels grouped by content.

D Return Button
Press this button during setup to cancel an operation or toggle off the setup screen.

E LCD/Touch Screen
Displays soft keys, features, modes and allows operation of the soft keys.

F Backlit/Sleep Button
Use to turn on this remote control, turn on the back light and enter the sleep mode.

G CH +/PLAY Button
Scrolls up through preset TV channels and plays audio devices.

H CH –/STOP Button
Scrolls down through preset TV channels and stops audio devices.

I Page Button
Toggles between the pages of a device screen.

J Device Buttons
Lets you select devices.

Name of each Control 2

K Macro Button

Used to display keys to which a Macro has been assigned.

L Setup Button

Pressing ⊗ and ⊙ buttons at the same time, enters the setup mode.

M Power Button

Turns on this remote control and functions as the power switch for preset devices.

N Volume + Button

Raises the volume of preset devices.

O Volume – Button

Lowers the volume of preset devices.

P Mute Button

Mutes the sound of preset devices.

Q Learning Eye

Receives the transmitted signal of other remote controls when learning remote control codes.

Screen Icons and Indicators

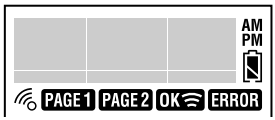

: Displays when key beep is on.

PAGE 1 PAGE 2 : Indicates the device's screen key page number.

OK : Indicates transmission of remote control signals. Lights when the attempted process has been completed successfully.

ERROR : Lights when an invalid key is pressed or the attempted process has failed.

: Indicates the battery power.

Pressing a device button displays the previously stored remote control layout.

AMP

A layout to operate the amplifier section of AG-L800 is stored. Pressing the Page button allows the selection of BASIC or ADVANCED screens. ► (PLAY) and ■ (STOP) buttons operate DV-L800.

TUNER

A layout to operate the tuner section of AG-L800 is stored. Pressing the Page button allows the selection of BASIC or ADVANCED screens.

DVD (CD)

A layout to operate the DV-L800 is stored. Pressing the button switches between the DVD and DVD/CD. Pressing the Page button allows the selection of BASIC or ADVANCED screens.

HDR (VCR)

A suitable layout to operate the VCR and Hard Disk Recorder is stored. Pressing the button switches between the HDR and VCR. When the HDR is selected, pressing the Page button allows the selection of BASIC or ADVANCED screens.

MD (CD-R/TAPE)

A layout to operate the TEAC MD Deck (MD-H series), CD Recorder (Except RW-D series) and Cassette Deck (Displaying the "UR" remote mark) is stored. Pressing the button switches between the MD, CD-R and TAPE. VOLUME +/– and (🔇) buttons operate AG-L800.

TV

A suitable layout to operate the TV is stored.

SAT

A suitable layout to operate the Satellite Tuner is stored.

AUX

A suitable layout to operate the auxiliary equipment is stored. VOLUME +/– and (🔇) buttons operate AG-L800.

Note:

- Device layouts stored in the remote control can be edited. See page 15 for more information.
- The REC key must be pressed for two seconds to begin recording.

When using other TEAC products or components

- The codes for 150 TV manufacturers have been pre-programmed into this remote control. See page 8, Pre-programmed Code Setting, for information on how to setup the remote control for these devices.
- If you have other devices the remote control codes can be learned by this remote control. See page 11, Learning Feature, for more information on how to use the Learning Feature.

Setup Mode

If you wish to add/delete a device, alter keys or their functions and many other actions, you will have to first enter the setup mode. If your remote control is off, press the POWER button to turn it on before attempting to enter the setup mode.

How to enter the setup mode

Once the power is on, press and hold both ⊗ (NEWS) and ◎ (MACRO) buttons for two seconds. The screen changes and DEVICE is displayed.



By pressing ▲ or ▼ on the touch screen, you can scroll through the menu items.

The menu items appear in the following order:

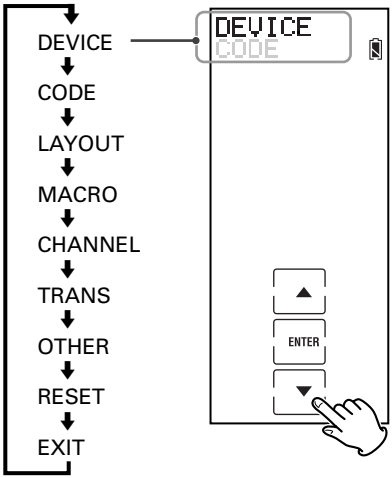

When the desired menu item is displayed, press ENTER.

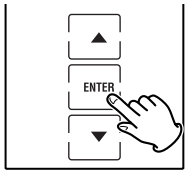

- Press the ⊗ button to exit from the setup mode or press ▲ or ▼, select EXIT and press ENTER.
- In the setup mode, pressing the ⊗ button allows you to exit from the current menu.
- The unit will exit from the setup mode automatically if no key presses are made for two or more minutes.

Pre-programmed Code Setting

If the remote controlled component is a TV, these pre-programmed code settings are already available in the remote control. By just selecting a code, your RC-L800 emulates the original remote control. There are two methods to select these devices, Manual and Auto. These methods are described below.

Note:
A very small number of functions or keys may not be emulated properly.

Manual

1. Enter the setup mode.

2. Press ▲ or ▼ to select CODE and press ENTER.

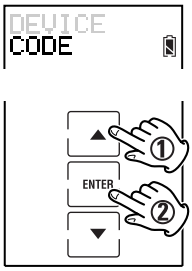

3. Press ▲ or ▼ to select PRE-CODE and press ENTER.

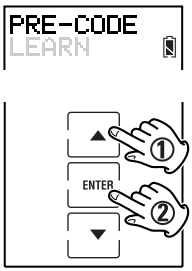

4. Press a device button to select a device. The device name and a device 4-digit code appear in the display.

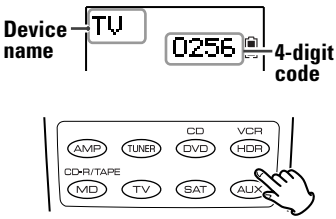

5. Enter the desired 4-digit code. See the attached sheet for a list of pre-codes.

- Using the numbered keys on the touch screen, enter a 4-digit code from the pre-programmed code list on the attached sheet.

  OR

- After selecting a device, you can also use the ◄ and ► keys to scroll through available device 4-digit codes.

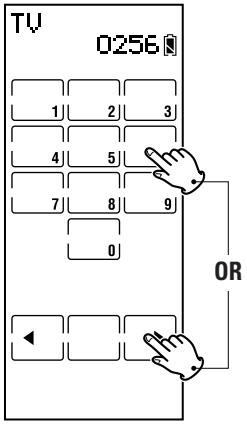

Setting Key Codes 2

6. Once the target component is on, point the remote control towards the target component and press the POWER button. If the target component responds to the POWER button, the device 4-digit code has been entered successfully.

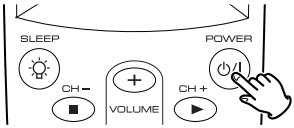

Note:

If the target component does not respond to the POWER button the 4-digit code may be incorrect. Confirm the 4-digit code for the target component on the attached sheet and enter it again.

7. Press the ⊙ button to complete the setup for the target component.

- If setup was successful, OK briefly flashes on the screen when you press the ⊙ button and the display returns to the previous screen.
- If setup was not successful, ERROR briefly flashes on the screen when you press the ⊙ button. Confirm the 4-digit code for the target component on the attached sheet and enter it again.

8. Press the ⊗ button repeatedly to exit from Manual setup and return to the previously displayed screen layout.

Note:

If at any point during setup you wish to exit from the setup screens, press the ⊗ button to go back through the displayed screens one by one.

Setting Key Codes 3

Auto

1. **Enter the setup mode.**

2. **Press ▲ or ▼ to select CODE and press ENTER.**

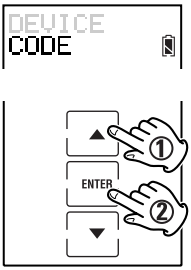

3. **Press ▲ or ▼ to select PRE-CODE and press ENTER.**

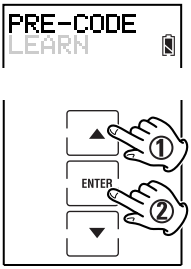

4. **Press a device button to select the device.**

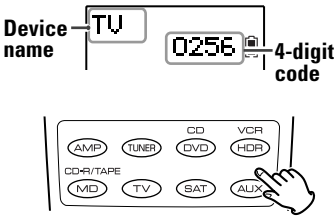

5. **Once the target component is on, point the unit towards the target component and press the key between the ◀ and ▶ keys. AUTO displays and the remote control sends a off signal to the target component for each 4-digit device code. When the target component turns off, press the POWER button.**



Point the unit towards the target component again and press the POWER button to verify that the code is correct. If the target component responds to the POWER button, the device 4-digit code has been entered successfully.

Note:
If the target component does not respond to the POWER button the 4-digit code may be incorrect. Return to step 1 to find the correct 4-digit code.

6. **Press the ⊙ button to complete the setting.**

7. **Press the ⊗ button repeatedly to exit from Auto setup and return to the previously displayed screen layout.**

Note:
If at any point during setup you wish to exit from the setup screens, press the ⊗ button to go back through the displayed screens one by one.

Learning a Device

If you have a target component that is not included in the list of pre-codes, you can still use RC-L800 to control the component by using your RC-L800 remote control to learn the control codes from the remote control of the target component.

Note:
Learning a device will overwrite key codes and macros already in the RC-L800. If you don't want to overwrite key codes or macros, create a new device in the RC-L800 before starting to learn a device. See page 25, Creating a New Device, for more information.

1. Enter the setup mode.

2. Press ▲ or ▼ to select CODE and press ENTER.

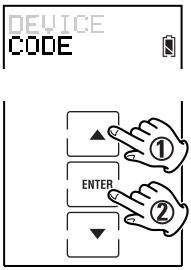

3. Press ▲ or ▼ to select LEARN and press ENTER.

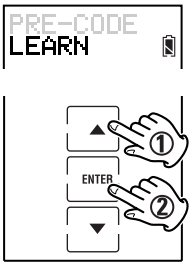

4. Point your target component's remote control at the RC-L800's learning eye, which is located at the bottom of the unit.

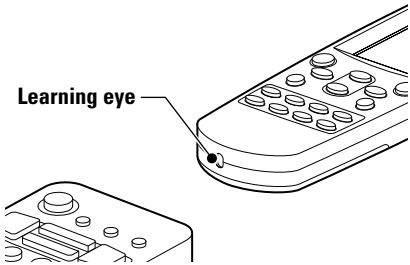

5. Press a device button to select the same type of device.

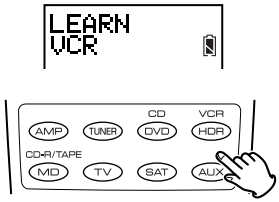

The screen shows a hard button layout of the device. The buttons are now ready to be assigned a function.

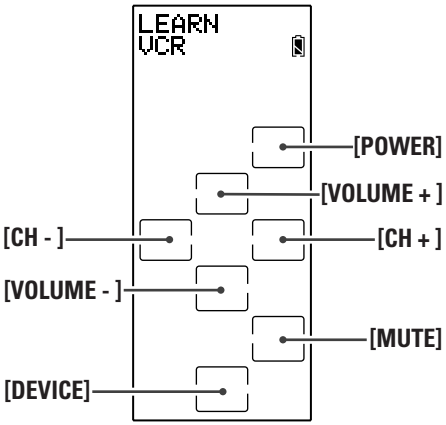

Note:
If the device displayed on the screen displays a page number, pressing the PAGE button switches between BASIC and ADVANCED key layout pages. Select an appropriate key layout page by pressing the PAGE button.

6. Touch a key on the touch screen to which you wish to assign a key function.

The selected key blinks.

7. Press the corresponding button on the target component's remote control. The code is sent to the RC-L800.

OK appears when successfully learned and the next key to be programmed blinks.
Or ERROR displays if there is a learning failure. If learning fails, attempt to learn the key again by starting again at step 6.

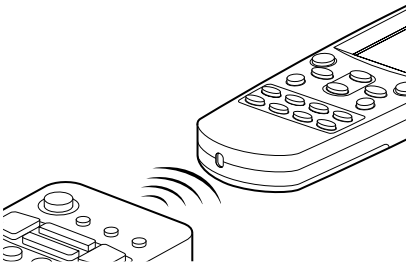

Repeat the steps 6–7 until all keys have been learned by the RC-L800.

To learn other devices, press the device button to select the additional devices and repeat steps 6–7.

8. Press the ⊗ button repeatedly to exit from Auto setup and return to the previously displayed screen layout.

Note:
- If at any point during setup you wish to exit from the setup screens, press the ⊗ button to go back through the displayed screens one by one.
- Sometimes when learning a key code OK is displayed but the learned key does not function properly. Repeat steps 6–7 above and check the function of the key again.
- There may be some functions of your target device remote control that the RC-L800 cannot emulate.

Deleting an Individual Key Code

The code assigned to a key or a MACRO can be deleted from keys individually.

1. Enter the setup mode.

2. Press ▲ or ▼ to select CODE and press ENTER.

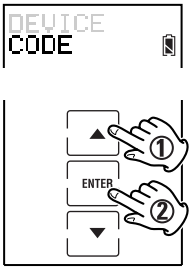

3. Press ▲ or ▼ to select DEL KEY and press ENTER.

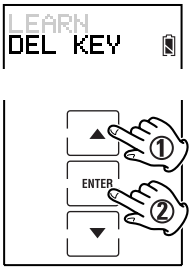

4. Press ▲ or ▼ to select DEL KEY again and press ENTER.

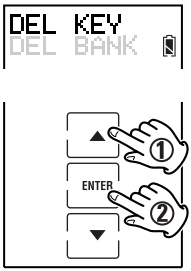

5. By pressing the device and page buttons, select the screen page from which you wish to delete a key.

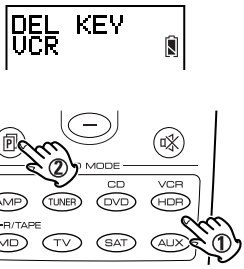

6. Touch the key you wish to delete the key code or MACRO.

- When deleted, OK flashes briefly. If a key previously was blank, ERROR flashes briefly.
- You may continue to delete other keys.

7. Press the ⊗ button repeatedly to exit and return to the previously displayed screen layout.

Note:
If at any point during setup you wish to exit from the setup screens, press the ⊗ button to go back through the displayed screens one by one.

Deleting Whole Key Codes of a Device

1. **Enter the setup mode.**

2. **Press ▲ or ▼ to select CODE and press ENTER.**

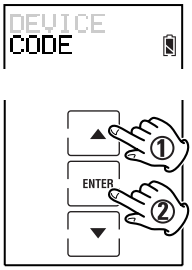

3. **Press ▲ or ▼ to select DEL KEY and press ENTER.**

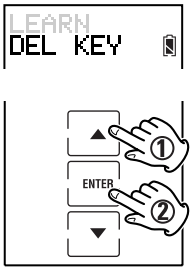

4. **Press ▲ or ▼ to select DEL BANK and press ENTER.**

5. **By pressing the device and page buttons, select the screen page from which you wish to delete all key codes.**

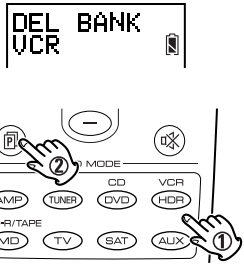

If a page is selected, all key codes are deleted from the device.

6. **Press the ⊙ button. A confirmation message appears.**

7. **Press ENTER to delete.**

- Press MENU to escape from deleting.
- When deleted, OK flashes briefly.

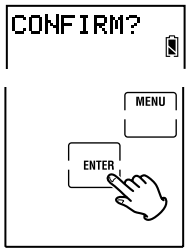

8. **Press the ⊗ button repeatedly to exit and return to the previously displayed screen layout.**

Note:

- If at any point during setup you wish to exit from the setup screens, press the ⊗ button to go back through the displayed screens one by one.
- If you delete a device by mistake you can re-program the RC-L800 by following the steps on page 8, Pre-programmed Code Setting, or page 11, Learning a Device.

Changing Key Layout

The soft key layout can be changed to match your preferences such as adding, deleting or changing keys or key labels. Your RC-L800 allows you to layout up to 21 keys per page.

1. Enter the setup mode.

2. Press ▲ or ▼ to select LAYOUT and press ENTER.

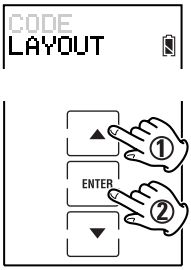

3. Press a device button to select a device.

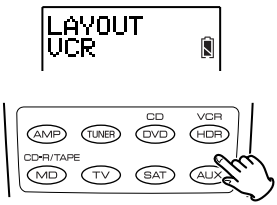

4. Select any key you wish to re-label, or tap on a blank space to make a key appear and tap the key to scroll through and select available labels. To delete a key tap on the key until they key disappears from the display.

- All available key labels for a specific key appear by pressing the POWER button.

Repeat this step for other keys.

5. Press the ⊙ button to save and complete the changes.

After changing the layout, set suitable key code to each changed key. See page 11, Learning a Device.

6. Press the ⊗ button repeatedly to exit and return to the previously displayed screen layout.

Note:

If at any point during setup you wish to exit from the setup screens, press the ⊗ button to go back through the displayed screens one by one.

Macro Function 1

- This function enables you to set up to 60 sequential operations into a single key.
- An interval can be set from 1–10 seconds between each operation.
- In the operation mode, you can view the macro-assigned key by pressing and holding the MACRO button. When you press and hold the MACRO button only keys that have macros assigned appear in the display.

Setting up Macros

1. Enter the setup mode.

2. Press ▲ or ▼ to select MACRO and press ENTER.

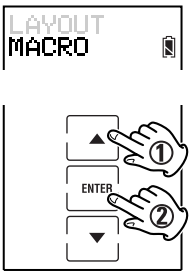

3. Press ▲ or ▼ to select NEW and press ENTER.

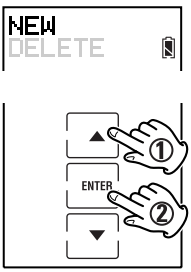

4. Once a device and page have been selected by pressing device and page keys, select and press the blank key you wish to set as a Macro key. When you press it, three beeps sound.

If the selected key had been a key code or Macro, it is overwritten with the new Macro.

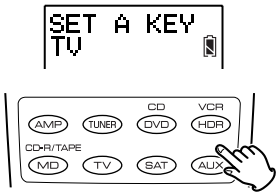

Start to define the Macro:

Example:

TV-Power on → TV-TV/Video → DVD-Power on (5-second interval) → DVD-Play

Press the device button of TV.
↓
Press the TV power button.
↓
Press the TV TV/VIDEO key.
↓
Press the DVD device button.
↓
Press the DVD power button.
↓
Press the ⊙ button to select interval.
↓
Press [5] for a 5-second interval.

↓
Press the DVD play button.

Macro Function 2

5. Press the ⊙ button for the confirmation.

6. Press the ⊙ button to save and complete the Macro setting.

7. Press the ⊗ button repeatedly to exit and return to the previously displayed screen layout.

Note:

If at any point during setup you wish to exit from the setup screens, press the ⊗ button to go back through the displayed screens one by one.

Viewing Macros

1. Enter the setup mode.

2. Press ▲ or ▼ to select MACRO and press ENTER.

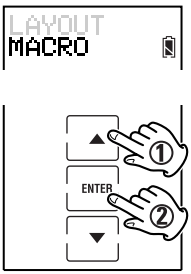

3. Press ▲ or ▼ to select VIEW and press ENTER.

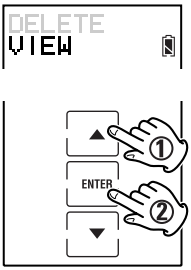

4. By pressing the device and page buttons, select the device and then the page that contains the Macro key.

The screen shows the Macro key if exists on the page.

5. Press the key to which a Macro has been assigned. The Macro's steps flash on the screen in order.

6. Press the ⊗ button repeatedly to exit and return to the previously displayed screen layout.

Note:

If at any point during setup you wish to exit from the setup screens, press the ⊗ button to go back through the displayed screens one by one.

Deleting Macro-Assigned Key

1. Enter the setup mode.

2. Press ▲ or ▼ to select MACRO and press ENTER.

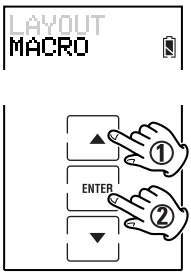

3. Press ▲ or ▼ to select DELETE and press ENTER.

4. By pressing the device and page buttons, select the device and then the page that contains the Macro key.

Only keys that have been assigned a Macro are displayed on the screen.

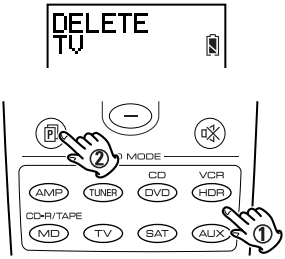

5. Press the key to which a Macro has been assigned to delete the key.

6. Press the ⊗ button repeatedly to exit and return to the previously displayed screen layout.

Note:

If at any point during setup you wish to exit from the setup screens, press the ⊗ button to go back through the displayed screens one by one.

Channel Assignment 1

This function allows you to assign TV or SAT channels into one of three groups, NEWS, SPORTS or MOVIES. Each group can contain up to 50 channels.

Setting the Assignment

1. Enter the setup mode.

2. Press ▲ or ▼ to select CHANNEL and press ENTER.

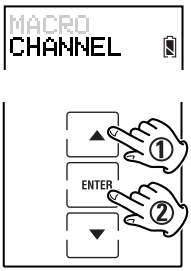

3. Press ▲ or ▼ to select NEW and press ENTER.

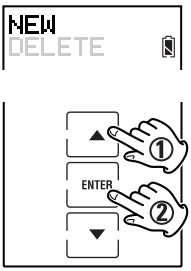

4. Press the TV or SAT device button to select the TV or SAT device.

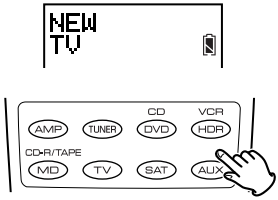

5. Enter a channel number by pressing the appropriate keys on the touch screen.

Example for 12 : 1 → 2

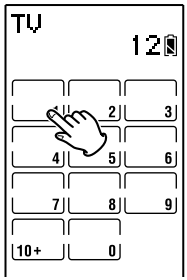

6. Press the channel assignment button in which the entered channel is assigned.

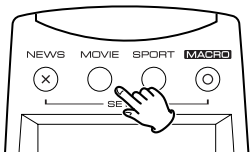

Repeat steps 5 – 6 for other assignments.

7. Press the ⊙ button to save and complete the setting.

8. Press the ⊗ button repeatedly to exit and return to the previously displayed screen layout.

Note:

If at any point during setup you wish to exit from the setup screens, press the ⊗ button to go back through the displayed screens one by one.

Viewing an Assigned Channel

Once a channel has been assigned to a NEWS, MOVIE or SPORT button it can be selected quickly by following the steps below.

1. Select the TV or SAT device by pressing the TV or SAT device button.



2. Press the NEWS, MOVIE or SPORT buttons.

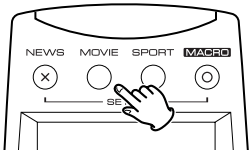

3. Press the CH+ or CH– button to scroll through assigned channels.

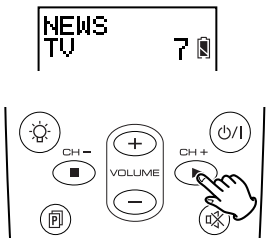

Deleting a Channel Assignment

1. **Enter the setup mode.**

2. **Press ▲ or ▼ to select CHANNEL and press ENTER.**

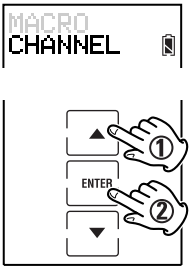

3. **Press ▲ or ▼ to select DELETE and press ENTER.**

4. **Press the TV or SAT device button to select the TV or SAT device.**

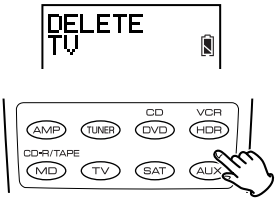

5. **Select and press the channel classification button including the channel you wish to delete.**

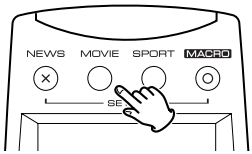

6. **Press ▲ or ▼ to select the channel you want to delete.**

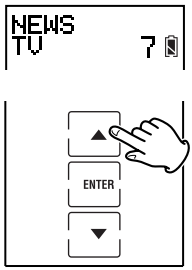

7. **Press ENTER to delete the channel.**

   Repeat steps 5 – 7 to delete other channels.

8. **Press the ⊙ button to complete deleting.**

9. **Press the ⊗ button repeatedly to exit and return to the previously displayed screen layout.**

Note:

If at any point during setup you wish to exit from the setup screens, press the ⊗ button to go back through the displayed screens one by one.

Re-labeling Assignment Key Labels

The three channel assignment buttons are NEWS, MOVIE and SPORT but their labels on the display can be changed. Follow these steps to assign new names to the buttons.

1. Enter the setup mode.

2. Press ▲ or ▼ to select CHANNEL and press ENTER.

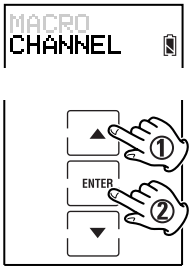

3. Press ▲ or ▼ to select RELABEL and press ENTER.

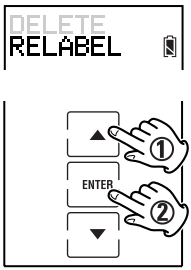

4. Select and press the channel classification button you wish to change the label.

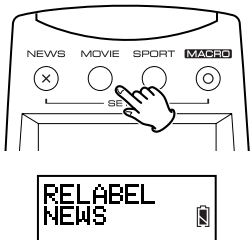

5. Edit label and press ENTER.

Editing a label:

- Press ◀ or ▶ to move the cursor.
- Press ▲ or ▼ to scroll through the characters: **A – Z, /, ?, –, 0 – 9** and space.

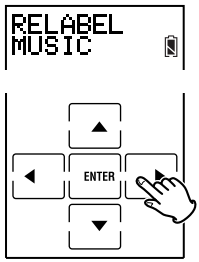

6. Press the ⊗ button repeatedly to exit and return to the previously displayed screen layout.

Note:

If at any point during setup you wish to exit from the setup screens, press the ⊗ button to go back through the displayed screens one by one.

Timer/Macro Mode

Timer/Macro Mode transmits a Macro command at a specific time delay within 23 hours and 50 minutes. The time delay can be set in 10-minute increments.

Setting Timer/Macro Mode

1. Press and hold the SLEEP button for 3 seconds to enter the setting mode.

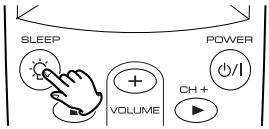

2. Press ▲ or ▼ to select the time delay in 10-minute increments.

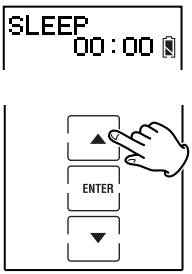

3. Press ENTER.

Start to define the Macro:

Example:

TV-Power on → TV-TV/Video → DVD-Power on (5-second interval) → DVD-Play

Press the device button of TV.
↓
Press the TV power button.
↓
Press the TV TV/VIDEO key.
↓
Press the device button of DVD.
↓
Press the DVD power button.
↓
Press the ⊙ button to select the interval.
↓
Press [5] for 5-second interval.
↓
Press the DVD play button.

4. Press the ⊙ button to confirm.

5. Press the ⊙ button to save and complete the setting.

The screen returns to normal mode and indicates the delay time and the device information.

Note:

- If you press the ⊙ button without defining a Macro, the timer mode is set but with no Macro executed.
- If at any point during setup you wish to exit from the setup screens, press the ⊗ button to go back through the displayed screens one by one.

Creating a New Device

Twelve device screens are factory preset as defaults. When setting a new device, the preset screen is assigned to the newly made device automatically.

1. Enter the setup mode.

2. Press ▲ or ▼ to select DEVICE and press ENTER.

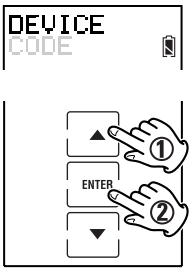

3. Press ▲ or ▼ to select NEW and press ENTER.

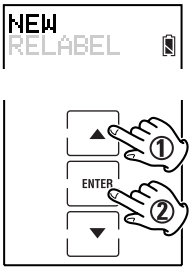

4. Press the device button in which the new device is categorized.

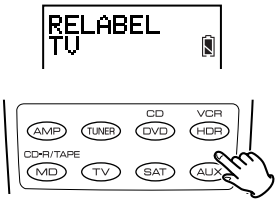

5. Edit device label and press ENTER.

Editing the label:

- Press ◀ or ▶ to move the cursor.
- Press ▲ or ▼ to scroll through the characters: **A – Z, /, ?, –, 0 – 9** and space.

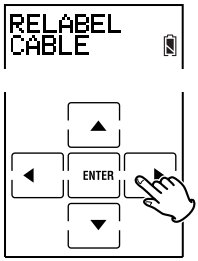

6. Press ▲ or ▼ to select device attribute and press ENTER.

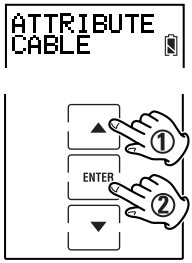

7. Press the ⊗ button repeatedly to exit and return to the previously displayed screen layout.

Re-labeling a Device

You can change the device label once set on the unit.

1. Enter the setup mode.

2. Press ▲ or ▼ to select DEVICE and press ENTER.

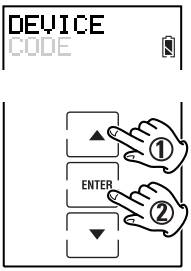

3. Press ▲ or ▼ to select RELABEL and press ENTER.

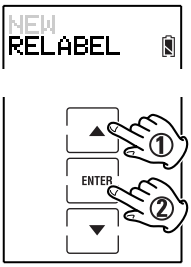

4. Press the device button to select the device you want re-label.

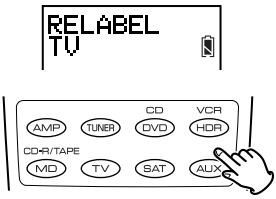

5. Edit device label and press ENTER.

Editing the label:

- Press ◀ or ▶ to move the cursor.
- Press ▲ or ▼ to scroll through the characters: **A – Z, /, ?, –, 0 – 9** and space.

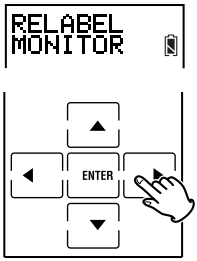

6. Press ▲ or ▼ to select device attribute and press ENTER.

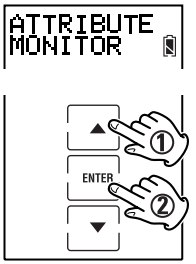

7. Press the ⊗ button repeatedly to exit and return to the previously displayed screen layout.

Deleting a Device

When you wish to delete a device that is no longer used, delete the device with the following steps.

1. Enter the setup mode.

2. Press ▲ or ▼ to select DEVICE and press ENTER.

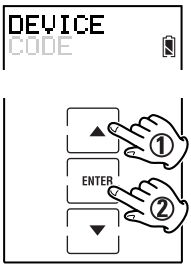

3. Press ▲ or ▼ to select DELETE and press ENTER.

4. Press the device button to select the device you wish to delete.

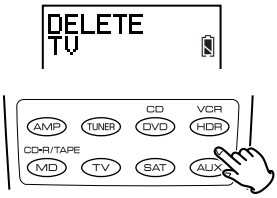

5. Press the ⊙ button. A confirmation message appears.

6. Press ENTER to delete the device. Press MENU to escape the deletion.

OK is displayed when a device has been deleted.

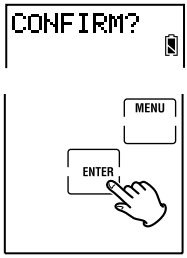

7. Press the ⊗ button repeatedly to exit and return to the previously displayed screen layout.

Setting Date and Time

1. **Enter the setup mode.**

2. **Press ▲ or ▼ to select OTHER and press ENTER.**

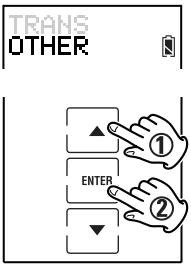

3. **Press ▲ or ▼ to select CLOCK and press ENTER.**

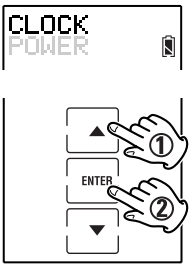

4. **Set Month, Date and Year.**

Setting Date:

- Press ◀ or ▶ move the cursor.
- Press ▲ or ▼ to change the data.

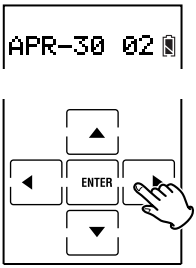

5. **Press ENTER.**

6. **Set Hour and Minute.**

   Week Day is determined automatically by linking the entered date to the calendar.

Setting Time:

- Press ◀ or ▶ move the cursor.
- Press ▲ or ▼ to change the data.

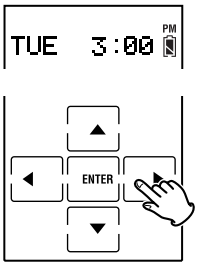

7. **Press ENTER.**

8. **Press the ⊗ button repeatedly to exit and return to the previously displayed screen layout.**

Display Date and Time

When not in setup mode, press and hold the PAGE button for more than one second. Date and time appear at the top of the display.

When you release the button the display returns to the normal display screen.

Auto Power OFF

Auto power off is available to save the batteries by turning off the unit when not used for a specified amount of time.

1. Enter the setup mode.

2. Press ▲ or ▼ to select OTHER and press ENTER.

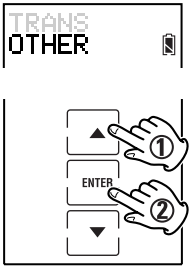

3. Press ▲ or ▼ to select POWER and press ENTER.

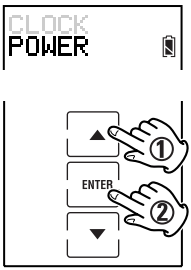

4. Press ▲ or ▼ to select a waiting time from 1– 90 minutes.

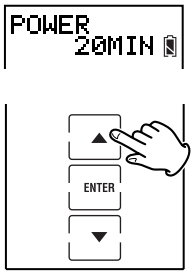

5. Press ENTER to save and complete the setting.

6. Press the ⊗ button repeatedly to exit and return to the previously displayed screen layout.

Back-light

You can change amount of the time the screen remains back-light after use and the sensitivity of the light sensor determining when the back-lighting should be turned on/off.

1. Enter the setup mode.

2. Press ▲ or ▼ to select OTHER and press ENTER.

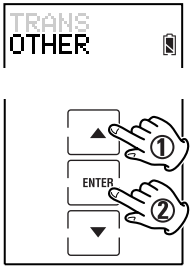

3. Press ▲ or ▼ to select BACKLIT and press ENTER.

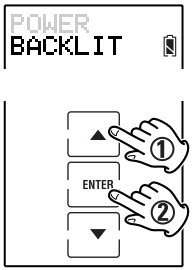

4. Select the amount of time the screen remains back-lit after use by pressing ▲ or ▼. The amount of time ranges from 1–60 seconds in 1-second increments, then press ENTER.

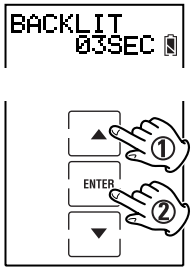

5. Select the sensitivity of the light sensor by pressing ▲ or ▼, Sensitivity ranges from 1–16. Press ENTER.

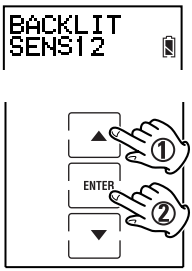

6. Press the ⊗ button repeatedly to exit and return to the previously displayed screen layout.

Beep on/off

When a key is pressed a beep sounds. The beep sound can be turned on/off.

1. Enter the setup mode.

2. Press ▲ or ▼ to select OTHER and press ENTER.

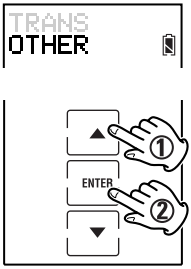

3. Press ▲ or ▼ to select BEEP.

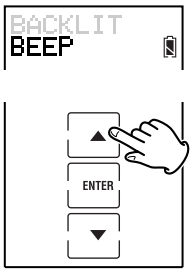

4. Press ENTER to switch key beep on or off. is indicated when activated.

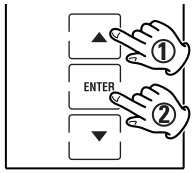

5. Press the ⊗ button repeatedly to exit and return to the previously displayed screen layout.

Note:

The beep sound is used to confirm that a key has been pressed and that other functions have been accomplished. If the beep sound is turned off this confirmation is not available.

Other Settings 5

Viewing Version Numbers

VERSION in the OTHER menu in setup mode is used only for servicing and not during normal use.

Data Transmission 1

Your RC-L800 is equipped with a data loading function. By using this function you can easily perform updates. Data loading can be done from your PC or another RC-L800.

Loading Data from a PC

When using a PC for loading or updating please read both the attached “RemoteComm Getting Started” and the “Instruction” PDF file on the CD-ROM.

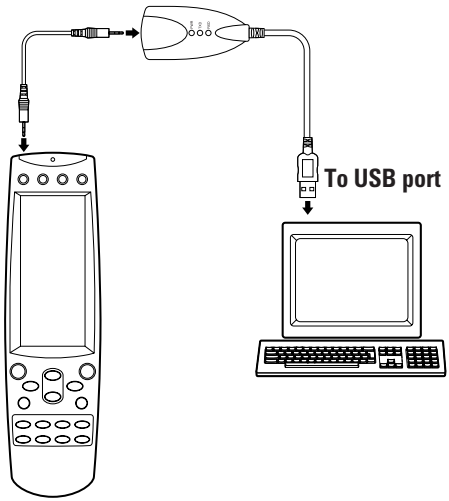

Loading Data from Another RC-L800

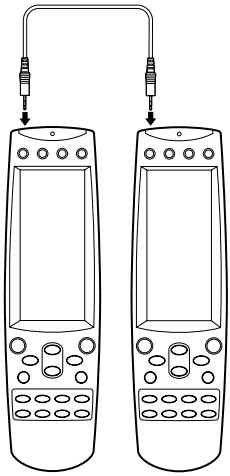

Prior to loading data, connect your receiving RC-L800 to transmitting RC-L800 with a mini-plug cable.

When using Setup Mode accomplish the following steps on the transmitting RC-L800.

1. **Enter the setup mode.**

2. **Press ▲ or ▼ to select TRANS and press ENTER.**

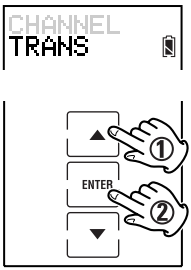

3. **Press ▲ or ▼ to select an item from PROGRAM, PRE-CODE, or MEMORY to be loaded.**

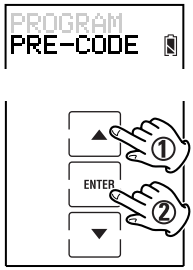

Note:

To program a RC-L800 put the receiving RC-L800 in the program mode by removing the batteries and switching the program switch to PROGRAM. Then reinsert the batteries. After programming is finished return the switch to the NORMAL position.

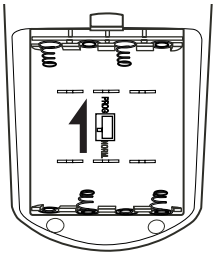

4. **Press ENTER to transmit the data.**

- If you wish quit loading, press the ⊙ button.
- During loading, the session is shown as illustrated.

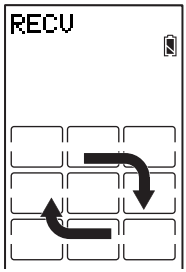

- Results are indicated by OK for success or ERROR for failure.

Re-setting the Unit

The following operation will reset all settings to the default settings.

1. Enter the setup mode.

2. Press ▲ or ▼ to select RESET and press ENTER. A confirmation message appears.

3. If you wish to confirm reset, press ENTER to reset all settings to the default settings.

- If not, press MENU to exit.
- OK is displayed when the unit has been reset.

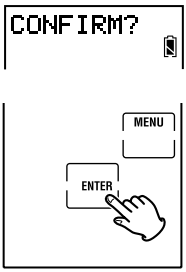

Debugging Code

DEBUG in the CODE menu in setup mode is used only for servicing and not during normal use.

Troubleshooting

If you experience any of the following difficulties while using the unit, use this troubleshooting guide to help you remedy the problem. Should any problem persist, consult your nearest service center.

The unit does not function

- ➔ Remove any obstacles between the unit and the system.
- ➔ Use the unit closer to the system.
- ➔ Point the unit at the front panel.
- ➔ Replace all the batteries in the unit with new ones if they are weak.
- ➔ Check to see that the batteries are installed correctly.

The unit does not respond to key presses

- ➔ Remove the battery cover and remove one battery. Reinsert the battery and replace the battery cover and operate the unit normally.

Specifications

Dimensions (W x H x D): 60 x 208 x 24 mm
Weight: 150 g (w/o batteries)
Number of emulating devices: Up to 16
LCD screen size: 39 x 90 mm
Back-lighting Device: LED
Accepted Signal Frequency for Learning:
10–125 kHz, 455 kHz and Pulse
Memory: 256 KB non-volatile flash memory
Batteries: AAA Battery x 4
Power Consumption: LCD Off ..... 50 µ A
LCD On ..... 350 µ A
Operated ..... 30-150 mA
Batteries Life: Approx. 2–3 month (Mn batteries)
Approx. 4–5 month (Alkaline batteries)
Operating Distance: Approx. 10 m
Interface: UART
Standard Accessories:

Battery (AAA, R03, UM-4)	4
Mini-plug cable	1
USB cable	1
Owner's Manual (RC-L800)	1
RemoteComm Getting Started	1
Pre-programmed Code List	1

TEAC

TEAC CORPORATION	3-7-3, Nakacho, Musashino-shi, Tokyo 180-8550, Japan Phone: (0422) 52-5081
TEAC AMERICA, INC.	7733 Telegraph Road, Montebello, California 90640 Phone: (323) 726-0303
TEAC CANADA LTD.	5939 Wallace Street, Mississauga, Ontario L4Z 1Z8, Canada Phone: (905) 890-8008
TEAC MEXICO, S.A. De C.V	Campesions 184, Col.Granjas Esmeralda, 09810, Mexico Phone: (525) 581-5500
TEAC UK LIMITED	5 Marlin House, Croxley Business Park, Watford, Hertfordshire, WD18 8TE, U.K. Phone: 01923-819699
TEAC DEUTSCHLAND GmbH	Bahnstrasse 12, 65205 Wiesbaden-Erbenheim, Germany Phone: 0611-71580
TEAC FRANCE S.A.	17, Rue Alexis-de-Tocqueville, CE 005 92182 Antony Cedex, France Phone: (1) 42.37.01.02
TEAC NEDERLAND BV	Oeverkruid 15, NL-4941 VV Raamsdonksveer, Nederland Phone: 0162-510210
TEAC BELGIUM NV/SA	c/o TEAC NEDERLAND BV, Oeverkruid 15, NL-4941 VV Raamsdonksveer, Nederland Phone: +31-162-510860
TEAC ITALIANA S.p.A.	Via C. Cantù 11, 20092 Cinisello Balsamo, Milano, Italy Phone: 02-66010500
TEAC AUSTRALIA PTY., LTD. A.B.N. 80 005 408 462	106 Bay Street, Port Melbourne, Victoria 3207, Australia Phone: (03) 9644-2442

This appliance has a serial number located on the rear panel. Please record the model number and serial number and retain them for your records.

Model number Serial number

PRINTED IN CHINA
0902·MA-0729